

How to insert a liner in the Caliber

Below are instructions for proper insertion of a CDF form-fit liner into a Caliber bin.



Remove liner from box and place on table.


Note: Can also use Caliber tote lid




Unfold liner.



Open liner, keep dispense fitment towards you.

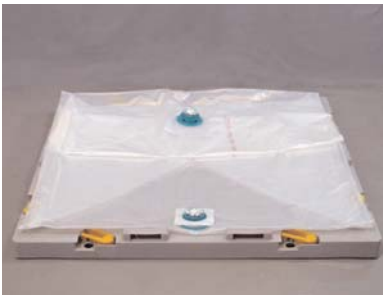

Remove bubble wrap from fill and dispense. Attach clip to the dispense fitment.

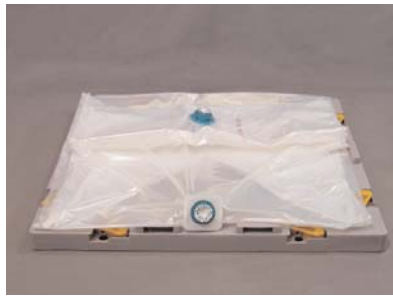

Pull dispense fitment forward.



Place liner in container with dispense fitment end in first.



Connect clip to tote.



Attach fill fitment to fill bridge.



Tote is ready to fill.



CDF Corporation · 77 Industrial Park Road · Plymouth, MA · 02360
800.443.1920 · www.cdf1.com