


Spear Cutter System Assembly

Below are instructions to dispense a tote with a 2" BSP or 2" buttress dispense using a ball valve and spear cutter assembly.

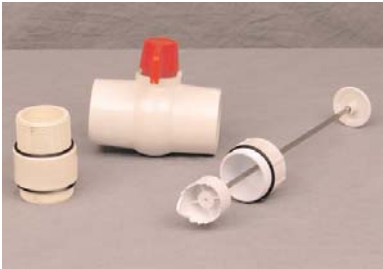

Items needed:

IC-9023: 2" ball valve

IC-9026: 2" spear cutter

IC-9024: 2" BSP or IC-9025: 2" buttress



Tote is ready for dispense.



Dispense fitment.




Remove plug and thread ball valve with proper adapter to dispense fitment.



Thread spear cutter onto ball valve.



Open the ball valve and push handle of spear cutter into the bag to pierce the membrane.

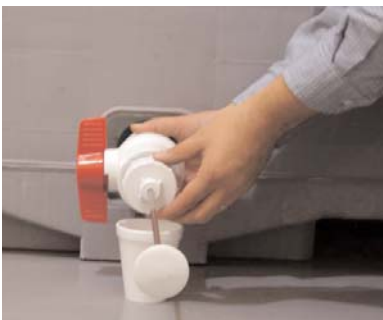

Withdraw the spear cutter, close the valve and remove cutter.

Note: A few ounces of product will be released



Attach necessary adapter to the ball valve.



Tote is ready for dispense.



CDF CORPORATION

CDF Corporation · 77 Industrial Park Road · Plymouth, MA · 02360
800.443.1920 · www.cdf1.com