

# Venturi System attachment to the Air-Assist Liner\*

Below are instructions on how to attach the Venturi System to the Air-Assist Liner when plant air is available.




Items needed:  
air fill hose  
2" BSP/ camlock adapter  
venturi system  
compressed air supply (not shown)



Fill tote normally, ensuring air-assist fill fitting is on top of bag.



Hang venturi system on side of bin.

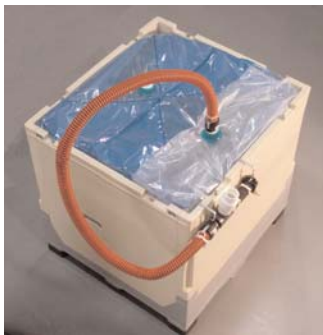

Attach air fill hose to venturi and air-assist fill fitting (camlock adapter).



Attach compressed air supply, 60-80 PSI is usually adequate.



Air-assist will inflate; dispense as usual.



Close-up of inflating liner.

\*Air-Assist Liner patent pending



CDF Corporation · 77 Industrial Park Road · Plymouth, MA · 02360  
800.443.1920 · [www.cdf1.com](http://www.cdf1.com)

Rev C